

IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Follow label information and instructions concerning Wet or Damp Locations, installation near combustible materials, insulation, building materials, and proper lamping. Do not install in areas subject to combustible vapors or gases. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. **All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with the National Electrical Code and local codes.** The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. Do not block light emanating from product in whole or part, as this may cause an unsafe condition. Do not allow items such as drapes, curtains, screens or the like to come into contact with the product or to block light from the product, as this may cause an unsafe condition.



INSTALLATION INSTRUCTIONS LUMEX, PENDANT AND CEILING MOUNT

**CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK MAKE CERTAIN THAT THE POWER IS OFF BEFORE INSTALLING OR SERVICING THIS FIXTURE.
PENDANT**

1. REMOVE LENS RING FROM HOUSING BY ROTATING COUNTER-CLOCKWISE.
2. ASSEMBLE THE STEM TO THE HOUSING BY THREADING ONE HEX NUT ON THE STEM AS FAR AS THE THREADS ALLOW. INSERT THIS END OF THE STEM THROUGH THE 9/16" DIA. HOLE IN THE TOP OF THE HOUSING. ASSEMBLE THE LOCKWASHER AND THE SECOND HEX NUT AND TIGHTEN TO SECURE THE STEM TO THE HOUSING.
3. FEED THE BLACK, WHITE AND THE GREEN LEADS THROUGH THE STEM.
4. REMOVE THE CANOPY FROM THE MOUNTING BY TURNING COUNTER-CLOCKWISE TO DISENGAGE THE SPRING CLIPS. ALLOW THE CANOPY TO REST ON TOP OF THE HOUSING.
5. MAKE ELECTRICAL CONNECTIONS. CONNECT GROUND WIRES TO GREEN GROUND LEADS. CONNECT WHITE (COMMON) TO WHITE LEADS. CONNECT POWER SUPPLY (LINE) TO BLACK LEADS.

WARNING: DO NOT PINCH WIRES. CONSULT A QUALIFIED ELECTRICIAN FOR ALL OTHER OPTIONS THAT REQUIRE OTHER WIRING CONFIGURATIONS.

6. FASTEN THE MOUNTING PLATE TO THE OUTLET BOX WITH THE OUTLET BOX SCREWS.
7. RE-ASSEMBLE THE CANOPY AND THE LENS RING.
8. INSTALL PROPER LAMP, BY OTHERS.

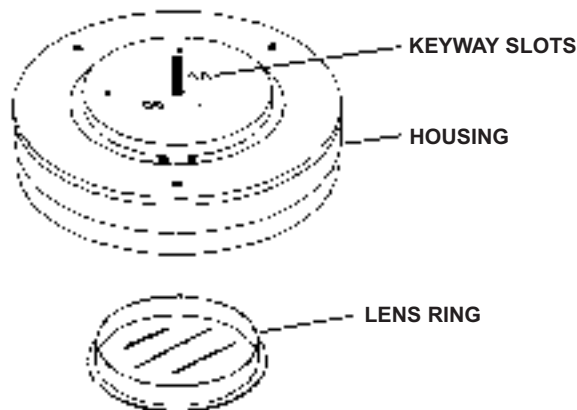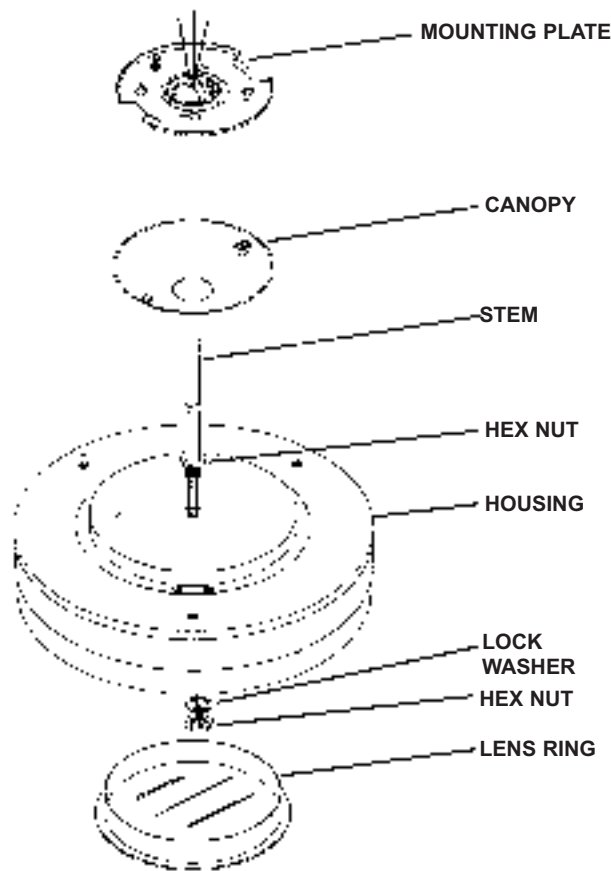

CEILING MOUNT

1. REMOVE LENS RING FROM HOUSING BY ROTATING COUNTER-CLOCKWISE.
2. MAKE ELECTRICAL CONNECTIONS, BLACK TO BLACK, WHITE TO WHITE, TERMINATE GREEN GROUND WIRE IN THE OUTLET BOX.
3. SECURE THE HOUSING TO THE OUTLET BOX USING THE OUTLET BOX SCREWS THROUGH THE KEYWAY SLOTS IN THE TOP OF THE HOUSING.