


IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Follow label information and instructions concerning Wet or Damp Locations, installation near combustible materials, insulation, building materials, and proper lamping. Do not install in areas subject to combustible vapors or gases. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. **All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with the National Electrical Code and local codes.** The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. Do not block light emanating from product in whole or part, as this may cause an unsafe condition. Do not allow items such as drapes, curtains, screens or the like to come into contact with the product or to block light from the product, as this may cause an unsafe condition.

INSTALLATION INSTRUCTIONS CAT. NO. TO72S/G, TB13, TA21-WS

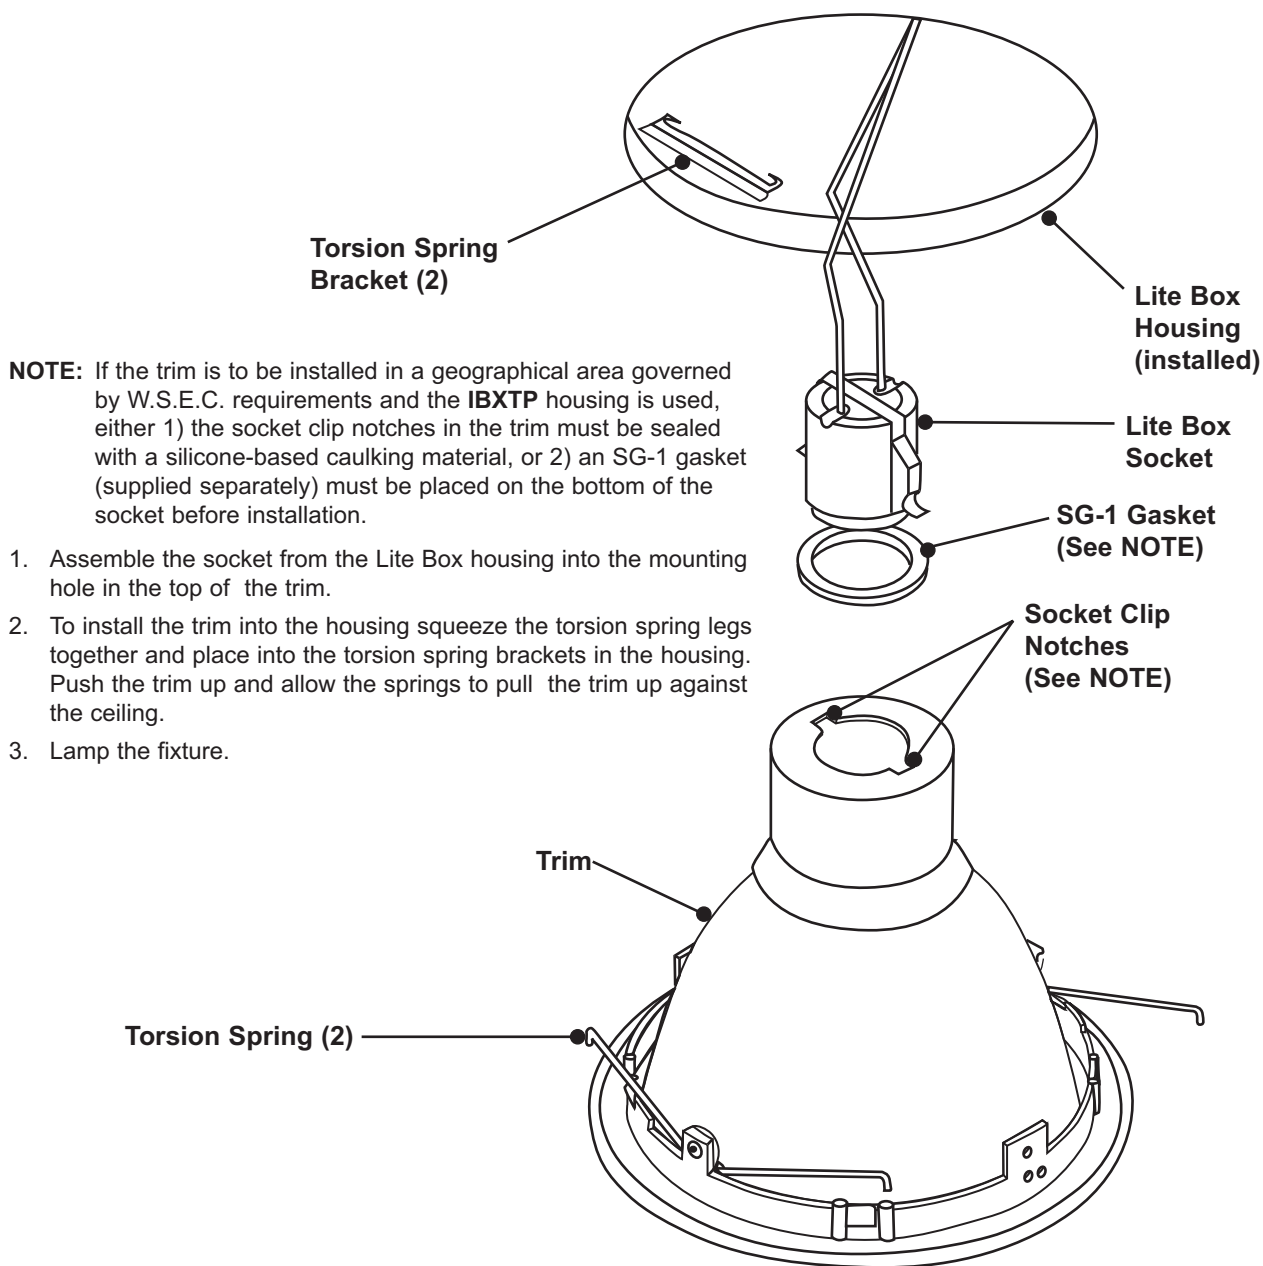

NOTE: If the trim is to be installed in a geographical area governed by W.S.E.C. requirements and the **IBXTP** housing is used, either 1) the socket clip notches in the trim must be sealed with a silicone-based caulking material, or 2) an SG-1 gasket (supplied separately) must be placed on the bottom of the socket before installation.

1. Assemble the socket from the Lite Box housing into the mounting hole in the top of the trim.
2. To install the trim into the housing squeeze the torsion spring legs together and place into the torsion spring brackets in the housing. Push the trim up and allow the springs to pull the trim up against the ceiling.
3. Lamp the fixture.