

IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Follow label information and instructions concerning Wet or Damp Locations, installation near combustible materials, insulation, building materials, and proper lamping. Do not install in areas subject to combustible vapors or gases. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. **All installation servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with the National Electrical Code and local codes.** The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. Do not block light emanating from product in whole or part, as this may cause an unsafe condition. Do not allow items such as drapes, curtains, screens or the like to come into contact with the product or to block light from the product, as this may cause an unsafe condition.

WARNING- This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

INSTALLATION INSTRUCTIONS D2LED

QUICK AND EASY INSTALLATION

In four easy steps, you can install D2LED in your next lighting design.

Before the ceiling is finished, run the appropriate line voltage (and 0-10V dimming control wiring if applicable) to the approximate location where the D2LED will be installed.

STEP 1: MAKE CEILING CUTOUT



Use a 2 7/8" hole saw and pilot drill to cut an opening for the D2LED downlight. Because of the small reflector flange of the D2LED, the accuracy of this hole is critical. Even a 3" hole saw may leave a ceiling cut out too large to be completely hidden after installation.

STEP 2: RUN WIRES TO J-TUBE



Pull the pre-existing wiring below the ceiling and connect to the J-tube assembly through the 1/2" knockout. A 3/8" flex conduit duplex connector may be used to easily daisy chain fixtures together. For end-of-run applications, a standard 1/2" connector can be used.

Because D2LED features 0-10 volt dimming capability, be sure to include any low voltage wire connections in this step. When wiring for dimming, the low voltage wiring installs through the adjoining 1/2" knockout. A second 3/8" flex conduit duplex connector may be used in this knock out where applicable.

STEP 3: SLIDE/SNAP J-TUBE CLOSED



Simply slide the J-tube closed until it locks into place with the springs on opposite ends of the assembly to complete the third step.

WARNING: Do not pinch wires between J-Tube cover and endplates.

**STEP 4:
INSTALL FIXTURE INTO CEILING**



Feed J-tube assembly through ceiling cutout. The J-tube assembly has been designed to conveniently lay on top of the ceiling material. (NOTE: This fixture is designed for use in a non-insulated ceiling. See installed above ceiling view.)



Squeeze retention springs, insert light engine assembly into the cut out, and push until springs pop out above the ceiling, locking the fixture into place.



Once installed, gently twist clockwise slightly to secure firmly against ceiling, being careful not to leave finger prints on the reflector.

INSTALLED ABOVE CEILING VIEW



REMOVAL FOR SERVICING





While the D2LED is designed with a life expectancy of over 50,000 hours, there may be times when you may need to access the fixture or J-tube assembly. For this reason, the D2LED has been designed to come out of the ceiling as easy as it went in.

Twist reflector slightly counter-clockwise while applying slight downward pressure. Then, once springs are accessible, squeeze together and remove fixture from ceiling.

WALL WASH INSTALLATION INSTRUCTIONS

WHEN INSTALLING THE WALL WASH FIXTURE, IT SHOULD BE NOTED THAT THE FIXTURE WILL ONLY TURN IN THE COUNTERCLOCKWISE DIRECTION AFTER INSTALLATION (AS VIEWED FROM THE ROOM SIDE). WITH THIS IN MIND, FOLLOW THESE INSTALLATION INSTRUCTIONS:

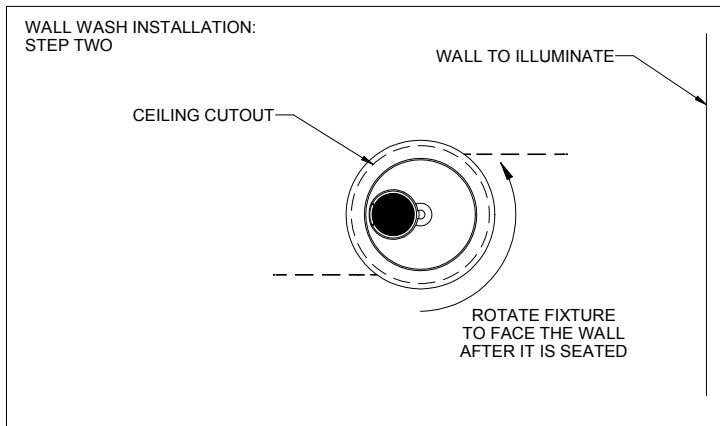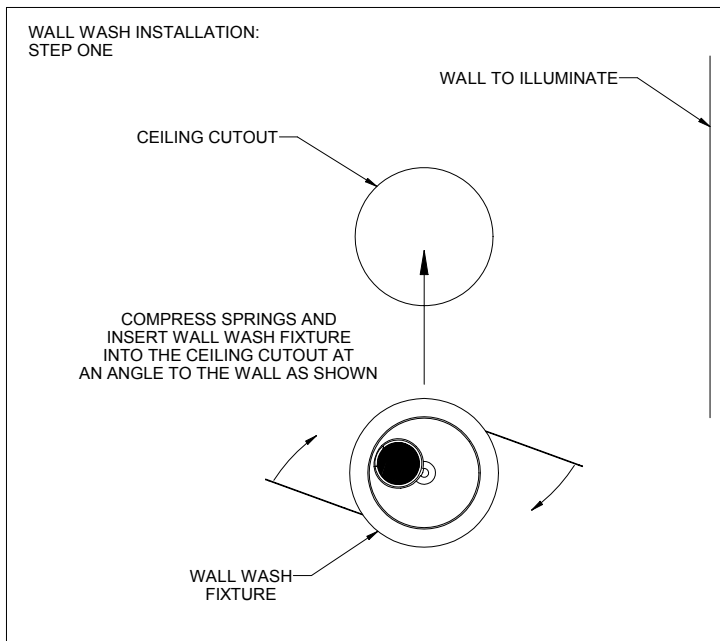

CAUTION: DO NOT ATTEMPT TO MODIFY OR REWIRE FACTORY-INSTALLED WIRING ON THE FIXTURE. SAFETY AND PROPER OPERATION OF THE FIXTURE DEPEND ON THE INTEGRITY OF THE WIRING.

KEEP THESE INSTALLATION INSTRUCTIONS

To view an installation video, go online to www.prescolite.com

701 Millennium Blvd • Greenville, SC 29607

With representatives offices in principal cities throughout North America.
Copyright 2011, 10/27/11 revision, All Rights Reserved - Printed in U.S.A.

