



**IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.** Follow label information and instructions concerning Wet or Damp Locations, installation near combustible materials, insulation, building materials, and proper lamping. Do not install in areas subject to combustible vapors or gases. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. **All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be mounted in locations and at heights and in a manner consistent with its intended use, and in compliance with the National Electrical Code and local codes.** The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. Do not block light emanating from product in whole or part, as this may cause an unsafe condition. Do not allow items such as drapes, curtains, screens or the like to come into contact with the product or to block light from the product, as this may cause an unsafe condition.

## INSTALLATION INSTRUCTIONS 79 SERIES

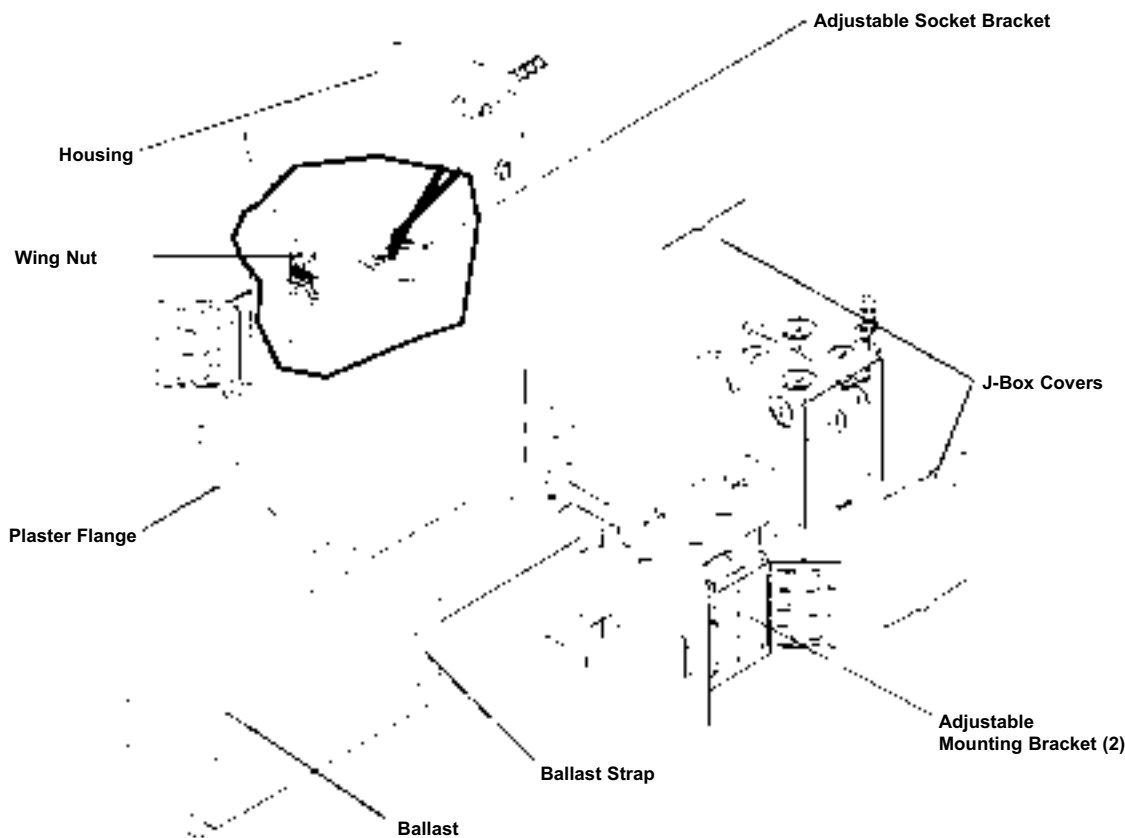

1. Install the fixture in the ceiling using mounting channel, bar stock or 1/2" rigid conduit placed in the adjustable mounting brackets. The fixture should be installed in such a manner that the weight of the fixture is supported by the mounting channels/bar stock/rigid conduit and/or hanger wires secured to the building structure.
2. Adjust the fixture so the bottom edge of the plaster flange is flush with the ceiling.
3. Secure the ballast to the fixture with the supplied ballast strap.
4. Remove the J-Box cover(s). Determine where the supply conduit will enter the J-Box.
5. Wire the fixture by following the diagrams on the back of this page. Be sure to connect green ground wire and push the splices into the J-Box. Replace the J-Box cover(s).



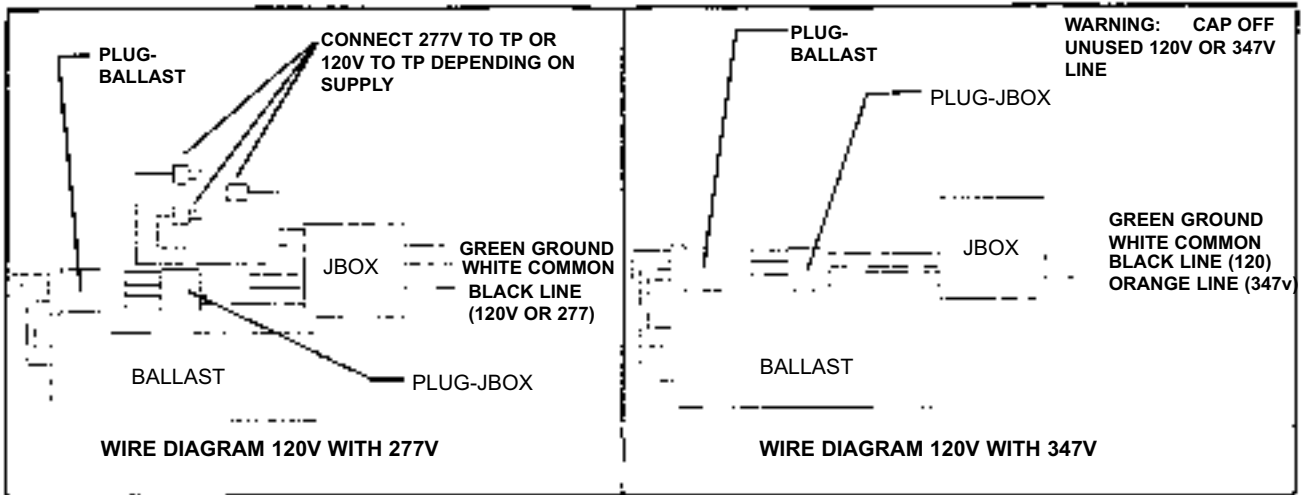

NOTE: BE SURE TO CONNECT THE PLUG FROM THE BALLAST WITH THE PLUG FROM THE J-BOX.

## TRIM INSTALLATION

### 920 TRIM:

1. ADJUST SOCKET BRACKET TO PROPER POSITION BY LOOSENING WING NUT.  
**PAR 30 LAMPS:** SLIDE BRACKET TO *LOWEST* (TOWARDS APERTURE) POSITION.  
**PAR 38 LAMPS:** SLIDE BRACKET TO *HIGHEST* (AWAY FROM APERTURE) POSITION.
2. TIGHTEN WING NUT SECURELY.
3. INSTALL TRIM BY LOCATING COIL SPRINGS IN SLOTS ON HOUSING.
4. INSTALL LAMP.

### 832, 833 AND 834 TRIMS:

1. ADJUST SOCKET BRACKET TO PROPER POSITION BY LOOSENING WING NUT.  
**PAR 30 LAMPS:** SLIDE BRACKET TO *LOWEST* (TOWARDS APERTURE) POSITION.  
**PAR 38 LAMPS:** SLIDE BRACKET TO *HIGHEST* (AWAY FROM APERTURE) POSITION.
2. TIGHTEN WING NUT SECURELY.
3. INSTALL LAMP.
4. LOCATE TRIM CLIP RETAINING HOLES ON LIP OF PLASTER FLANGE. ATTACH TRIM RETAINING CLIPS (3) TO PLASTER FLANGE.
5. PRESS TRIM INTO APERTURE.

